

Timber joints to be either:

1 No. Solid Timber

or;

2 No. Timbers (nailed and glued).


When fully nailing Timbers, Glue is also to be used.

NO EXCEPTIONS

Solid Timber



2 no Rebate Timbers

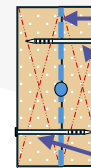

Bead of PU Adhesive along one timber face prior to abutment.

Nails as per fixing schedule.

***ALL SIPs REBATES PREPARED AS PER DETAIL**

SD-01